

# XMP-3250/3350 User's Manual



## Notes about model variants

The XMP-3250 and XMP-3350 models are based on XMP-3250 with the following differences:

### XMP-3250

Ethernet only

### XMP-3350

Ethernet + Wi-Fi

Wireless operations apply to XMP-3350 only. All other aspects of operation are identical for each model.

# Contents

## XMP-3250/3350 User's Manual

|           |                                                                   |          |
|-----------|-------------------------------------------------------------------|----------|
| <b>1.</b> | <b>Introduction</b>                                               | <b>1</b> |
| 1.1.      | Features                                                          | 1        |
| 1.2.      | Package contents                                                  | 1        |
| 1.3.      | Mounting options                                                  | 1        |
| 1.4.      | Physical view                                                     | 2        |
| <b>2.</b> | <b>Configuring the XMP-3250/3350 Media Player</b>                 | <b>3</b> |
| 2.1.      | System connections                                                | 3        |
| 2.2.      | USB keyboard configuration menus                                  | 3        |
| 2.3.      | Connect the XMP-3250/3350 to your network                         | 4        |
| 2.4.      | Video output settings                                             | 5        |
| 2.5.      | Clock and calendar settings                                       | 5        |
| 2.6.      | Setting a password                                                | 5        |
| 2.7.      | Factory reset                                                     | 6        |
| 2.8.      | Applying firmware upgrades                                        | 6        |
| <b>3.</b> | <b>Content Management</b>                                         | <b>7</b> |
| <b>4.</b> | <b>Authoring in HTML5</b>                                         | <b>7</b> |
| <b>5.</b> | <b>Working with SMIL</b>                                          | <b>7</b> |
| 5.1.      | Introduction                                                      | 7        |
| 5.2.      | <a href="http://www.a-smil.org">www.a-smil.org</a> for developers | 7        |
| <b>6.</b> | <b>Technical Data</b>                                             | <b>8</b> |
| 6.1.      | Specifications                                                    | 8        |
| <b>7.</b> | <b>Appendix: FAQ</b>                                              | <b>9</b> |

# 1. Introduction

This document describes the hardware and software operations of the XMP-3250/3350, system set up, and frequently asked questions.

## 1.1. Features

 
The XMP-3250/3350 is a Full-HD 1080p high definition digital signage player featuring industrial grade mechanical design and versatile open-standard HTML5 and SMIL programmability.

- Support for HTML5 widgets for dynamic content (W3C Widgets standard)
- Full-HD 1080p hardware decoding of MPEG, H.264, and VC-1 media formats
- 4GB on-board flash local storage with CF card slot
- Integrated audio and video output via HDMI
- Supports full POPAI Screen Media Formats Standards profiles S1 to S12, and E1 to E9
- Multiple 3<sup>rd</sup> party software solution compatibility
- Industry leading W3C SMIL support for developers
- (XMP-3350 only) Built-in wireless b/g/n network

## 1.2. Package contents



Media Player Unit

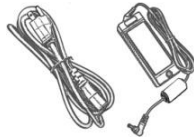

AC Adapter and



Ethernet cable




Standard 3.5mm to  
RCA AV adapter



Quick Start



 Documentation CD  
(select SKUs)



Software set up guide  
(select SKUs)



Wi-Fi Antenna  
(XMP-3350)




CF card cover/remover  
(pre-installed on unit)

**NOT INCLUDED:** A USB keyboard is required for system setup

## 1.3. Mounting options

 
The player can be attached to mounting posts on the back of screens or inside cabinetry with the built in VESA MIS-D100 (100mmx100mm) compatible mounting flange

**(For XMP-3350 only)** ATTACH the wireless antenna as shown. Screw antenna clockwise onto the post

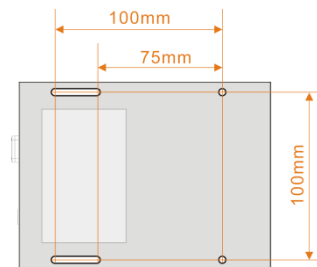

Bottom view

## 1.4. Physical view

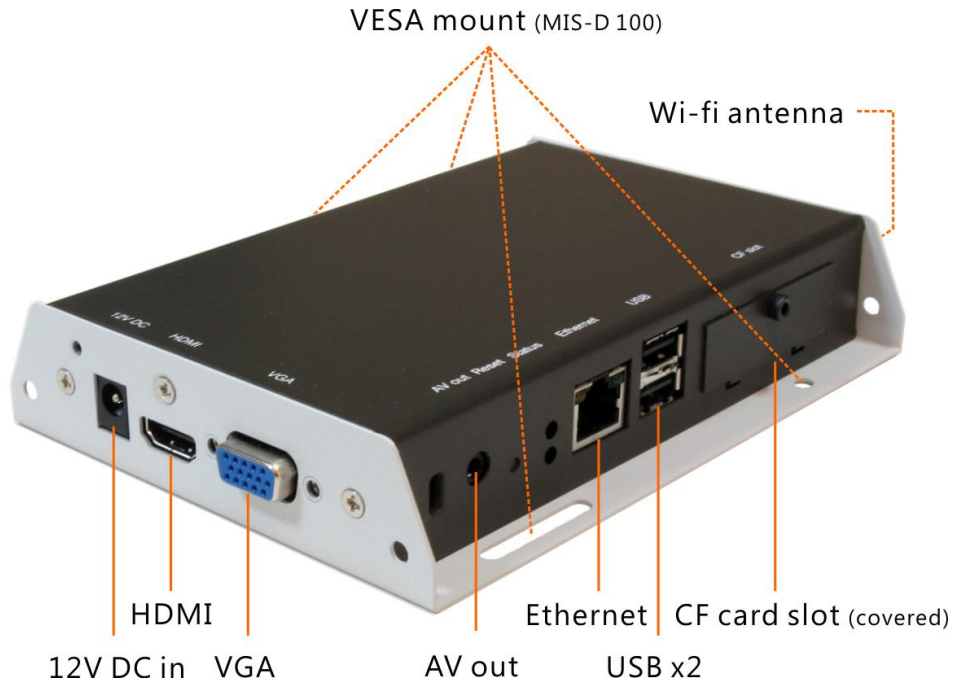 

### Physical features (left to right in above illustration)

- 12V DC for power adapter
- HDMI 1.3a connector for digital video and audio combined outputs, or digital video via option DVI adapter
- VGA port for analog video output
- 3.5mm composite AV output
- S/W Reset button to perform factory reset
- Ethernet port for network content update
- USB ports for USB content update and configuration
- CF card slot cover with integrated CF card removing tool

## 2. Configuring the XMP-3250/3350 Media Player

### 2.1. System connections

 
- 1 Attach a video cable (either VGA or HDMI) to your monitor.

When using the **VGA connection**, your monitor should support XGA (1024x768) resolution or greater. For audio output, you will also need to connect a stereo RCA cable from the XMP-3250/3350 to your monitor.

When using an **HDMI connection**, audio is sent along with video over the HDMI cable, so no additional cables are required.

Reminder: If you do not see anything on screen, check your monitor video input mode.

- 2 Attach the AC power adapter to power on the unit. Shortly afterwards, the following progress bar will be displayed on your monitor:

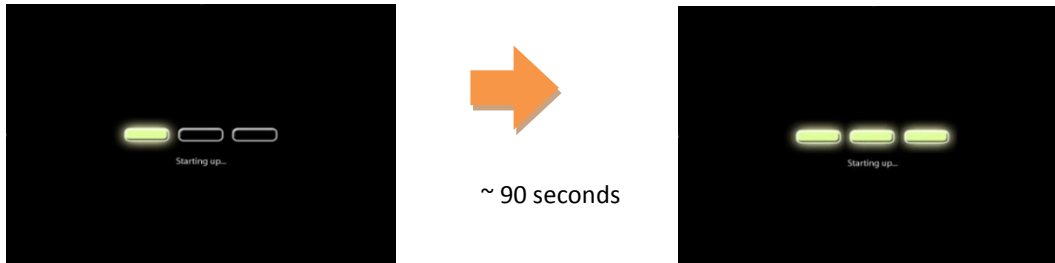

- 3 Player boot process takes approximately **90 seconds** to complete. The player will indicate that it is ready for content sync via the USB port or, if content has been loaded, begin playback immediately.

#### Troubleshooting Tips

- 1 The operation indicators light up, but no video is displayed on screen.
  - Ensure that your video cable (VGA or HDMI) is securely connected. When using an HDMI connection, choose high quality, certified HDMI cables or try using shorter length cables.
  - Check if your monitor is turned-on and switched to the corresponding video input source.
- 2 No sound is heard.
  - If using VGA connection, you also need to connect RCA audio cables.
  - Check volume (mute) settings on monitor.

 


After performing the initial setup as outlined above, the player will boot into the “Open Standard Media Player” screen. Plug in a USB keyboard to enter configuration menus.

**If you have already loaded media contents into the player**, contents will play back immediately after boot up, and the “Open Standard Media Player” screen will not be shown. You can still plug in a USB keyboard at any time during playback to enter the menu system.

### 2.2. USB keyboard configuration menus

You must attach a USB keyboard to the XMP-3250 to configure settings. With the player booted up and ready, it takes approximately 30 seconds after you plug in the keyboard for the following menu to be displayed:

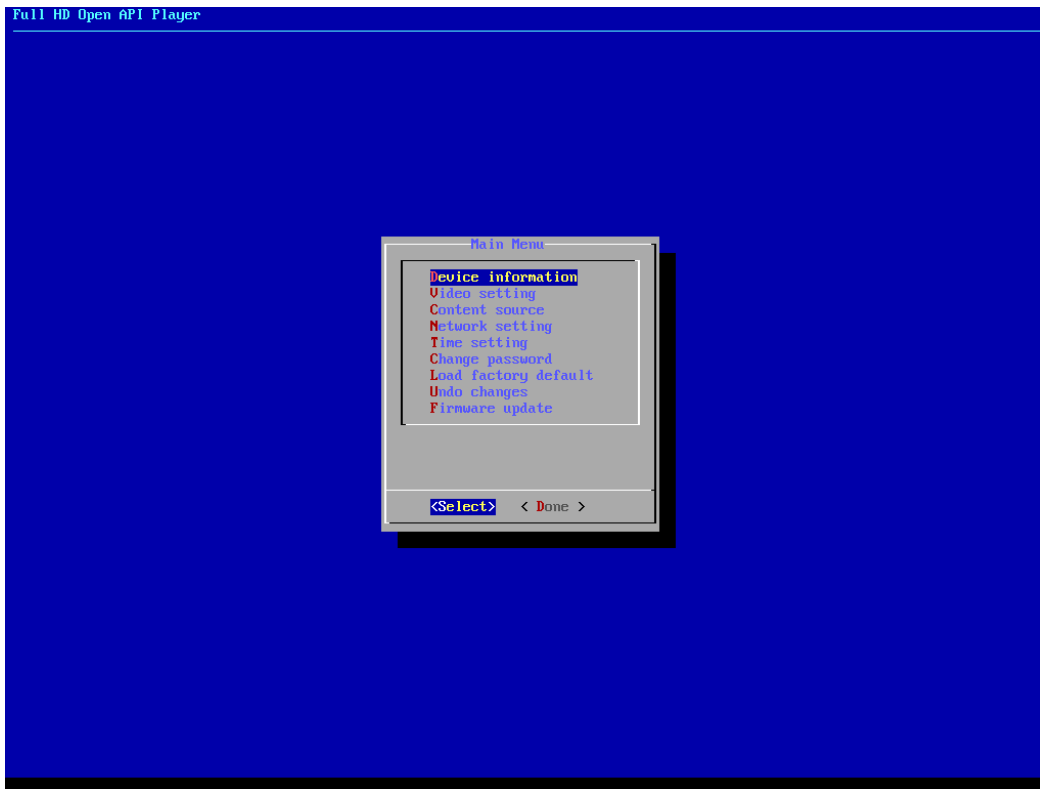

### *Navigating the menus*

Navigate the menus using arrow keys, space bar, enter key, and numeral keys on your USB keyboard. Use the keyboard arrow keys to highlight menu items, press the space bar to move the star (cursor), and then press enter to confirm (<OK>) or reject (<Cancel>) any changes.

## **2.3. Connect the XMP-3250/3350 to your network**

Enter Network setting in the menu to set up a network connection method.

### **Wireless connection (XMP-3350 only)**

 
 
The player will scan for wireless signals nearby during boot up. If the network requires authentication, you will be asked to provide the password for access.

### **Wired connection**

To use the wired Ethernet connection, connect an Ethernet cable and the Wi-Fi (XMP-3350) will be disabled.

### **Player IP address**

You will also need an IP address for the player on your network. This could be set automatically (DHCP) or manually (static IP):

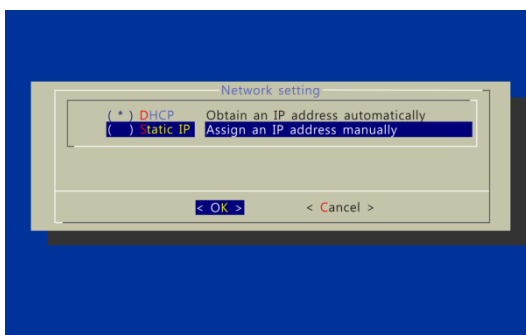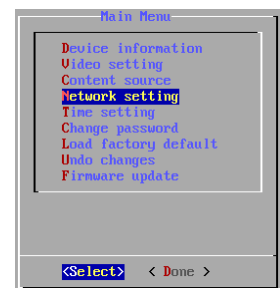


### ***DHCP – automatically assign network IP address***

DHCP is enabled by default. You do not need to change the settings unless setting a static IP.

### ***Static IP – manually assign network IP address***

Highlight “IP configuration” and press “Enter” on keyboard to <Select>

 Move the highlight to “Static IP” below, press “Space bar” on the keyboard to fill in the star (\*) at the Static IP brackets, and press “Enter” on the keyboard to select <OK>.

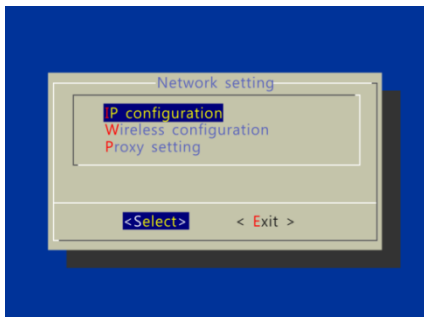


Proceed to configure an available static IP address. Select Wireless configuration or IP configuration as determined by your connection. Please consult your network administrator for assistance if necessary.

## 2.4. Video output settings

 
For best quality, set the output resolution to match your display's native resolution to avoid image scaling and blur.

If you are connecting to an LCD TV, the resolution setting is most likely 1366x768, 1280x720, or 1920x1080. If you are connecting a LCD computer monitor, projector, or plasma display, refer to the device specifications for the best matching setting.

Press the space bar to fill in the star (\*) before pressing the enter key for <OK>.

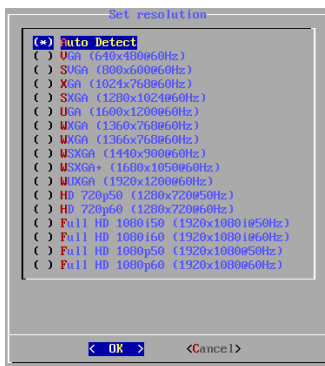


## 2.5. Clock and calendar settings

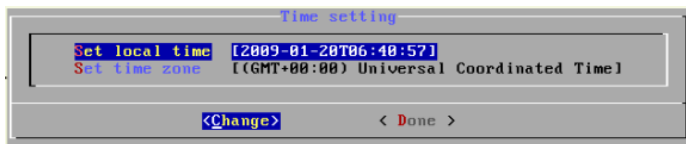 

Set the correct time zone, time, and date. Daylight Saving (DST) rules can be configured in *Set time zone*.

## 2.6. Setting a password

 To prevent unauthorized modification of player settings, set a player password to hide the menu.

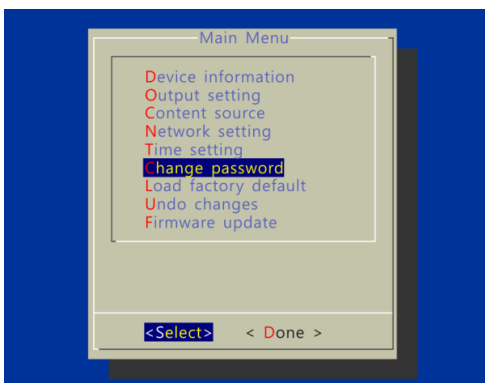

From the top level menu, select "Change password" to set a password.

**IMPORTANT:** Once a password is set, you can only access the menus by connecting a USB keyboard and pressing CTRL + ALT + DELETE (3-key combination) simultaneously. You may connect the keyboard at any stage of player operation or before/ during boot-up.

If you forget the password, you will need to reset the device. See *Factory reset*.

## 2.7. Factory reset

If you forget a system password you have set, you must reset the system to regain access to the player.

### Using the reset button

- 1 PRESS** and **HOLD** the reset button with a pin
- 2 RE-CONNECT** the power cord
- 3 WAIT** about 8 seconds or until the status LED flashes
- 4 RELEASE** reset button and wait for system to initialize



### Using a USB keyboard

System reset will re-initialize the system, clear passwords, and return settings to their default values. Perform the following:

- 1 CONNECT** USB keyboard
- 2 REBOOT** the player and look for the reset instructions on the top left corner of the screen. When it appears, **PRESS** the Delete key on your keyboard  
→ If you missed the reset window, unplug power and try again
- 3** You should see a menu with a reset confirmation dialogue box. **SELECT** Yes to confirm
- 4 WAIT** while system reboots to complete reset

## 2.8. Applying firmware upgrades

Firmware updates can be performed using a USB flash drive. Please read the release notes carefully regarding the changes that will be made to your player before applying the upgrade

- 1 DOWNLOAD** the latest firmware and copy it to the root directory of a USB drive from [www.digisignage.com](http://www.digisignage.com)
- 2 PLUG** the power cord into the device
- 3 PLUG** a USB keyboard to the device to enter menu system
- 4** Follow on screen instructions and **SELECT** firmware upgrade option in the menu
- 5** When instructed, **PLUG IN** the USB drive to begin firmware upgrade

### 3. Content Management

The XMP-3250 is designed to work with 3<sup>rd</sup> party management solutions. Please refer to the printed guide for related set up instructions.

### 4. Authoring in HTML5



A major advancement in the XMP-3250/3350 media appliance is the ability to playback HTML5 content which can contain dynamic information.

### 5. Working with SMIL

The XMP-3250/3350 uses open communications protocols for content presentation and playback control. SMIL-compliance means predictable results across multiple devices, and SMIL's non-proprietary nature means that your investments are never obsolete.

#### 5.1. Introduction

Using SMIL (pronounced "smile"), the language created by W3C for multimedia communications, the media player understands the language "spoken" by professional tools from companies such as Adobe, Apple, Microsoft, and Real Networks. What this means is quicker, easier, and better integration of your players into your digital signage networks, opening up avenues of software controls and realizing the full potential of your player hardware down the road.



#### 5.2. [www.a-smil.org](http://www.a-smil.org) for developers

The media player operating system utilizes W3C SMIL as the underlying scripting language, which lends well to customization to your project management needs. For resources, downloads, and community support, please visit [www.a-smil.org](http://www.a-smil.org).

## 6. Technical Data

### 6.1. Specifications

|                                | XMP-3250                                                                                                                                                                                                                                                                                                                                                                                                                                          | XMP-3350                                |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|
| <b>Video format support</b>    | POPAI Screen Media Standards<br>S6 (MPEG-1 SIF, 3Mbps CBR)<br>S7 (MPEG-1 480p, 10Mbps CBR)<br>S8 (MPEG-1 720p, 15Mbps CBR)<br>S9 (MPEG-2 480p, 6Mbps CBR)<br>S10 (MPEG-2 720p, 12Mbps CBR)<br>S11 (MPEG-4 AVC, 480p, 6Mbps CBR)<br>S12 (MPEG-4 AVC, 720p, 10Mbps CBR)<br>E4 (VC-1/WMV9, MP@ML, 720p)<br>E5 (VC-1/WMV9, MP@HL, 1080p)<br>E6 (MPEG-2, 1080p, 20Mbps CBR)<br>E7 (MPEG-4 ASP, 480p, 10Mbps CBR)<br>E8 (MPEG-4 AVC, 1080p, 20Mbps CBR) |                                         |
| <b>Image format support</b>    | POPAI Screen Media Standards<br>S1 (JPEG 480p baseline)<br>S2 (JPEG 720p baseline)<br>S3 (JPEG 1080p baseline)<br>E1 (PNG 24bpp+alpha, 480p)<br>E2 (PNG 24bpp+alpha, 720p)<br>E3 (PNG 24bpp+alpha, 1080p)                                                                                                                                                                                                                                         |                                         |
| <b>Audio codec support</b>     | POPAI Screen Media Standards<br>S4 (MPEG L2 audio)<br>S5 (MP3 audio, 320Kbps)                                                                                                                                                                                                                                                                                                                                                                     |                                         |
| <b>Dynamic content</b>         | W3C HTML5 (HTML, CSS, JavaScript)<br>W3C SMIL 3.0 instructions (sub-set)                                                                                                                                                                                                                                                                                                                                                                          |                                         |
| <b>Physical I/O connectors</b> | HDMI 1.3<br>VGA<br>3.5mm AV out<br>RJ45 Ethernet<br>USB 2.0                                                                                                                                                                                                                                                                                                                                                                                       | As XMP-3250 plus:<br>Wi-Fi antenna port |
| <b>Local storage</b>           | 4GB on-board flash memory (up to 1.8 hrs of 5 Mbps high def. video)<br>CF card expansion slot                                                                                                                                                                                                                                                                                                                                                     |                                         |
| <b>Accessories</b>             | 3.5mm-RCA AV cable<br>Ethernet cable                                                                                                                                                                                                                                                                                                                                                                                                              | As XMP-3250 plus:<br>Wi-Fi antenna      |
| <b>Power requirement</b>       | 12V 1.5A DC                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                         |
| <b>Power consumption*</b>      | 8 watts max (when playing 1080P full resolution video)                                                                                                                                                                                                                                                                                                                                                                                            |                                         |
| <b>Environmental</b>           | Operating temperature: 0 – 40° C / 32 – 104° F<br>Humidity: 5 – 85% @ 40° C / 32 – 104° F non-condensing                                                                                                                                                                                                                                                                                                                                          |                                         |
| <b>Dimensions</b>              | 156 x 115 x 29mm (6.1 X 4.5 X 1.1 inches)                                                                                                                                                                                                                                                                                                                                                                                                         |                                         |
| <b>Weight</b>                  | 1.14kg<br>2.5lbs                                                                                                                                                                                                                                                                                                                                                                                                                                  | 1.4kg<br>3 lbs.                         |
| <b>Safety</b>                  | UL-approved AC adapters                                                                                                                                                                                                                                                                                                                                                                                                                           |                                         |
| <b>Certifications</b>          | CE/FCC/RoHS                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                         |
| <b>Warranty</b>                | One-year limited parts & labor                                                                                                                                                                                                                                                                                                                                                                                                                    |                                         |

## 7. Appendix: FAQ

### *What video format can I play?*

Video files encoded in MPEG-4 ASP up to 720x400 resolutions and 2Mbps bitrates should play perfectly. If a certain video is not played as scheduled, or if it plays poorly, please search the support site for “transcode” instructions.

### *The signboard is placed near my Wi-Fi access point, yet the connection is unreliable.*

Wi-Fi appliances in general should be placed 10 feet (3 meters) from the Wi-Fi access point for reliable operation. Try relocating the access point further away from the signboards to improve connection.

### *What can I do about the gap between video and video?*

Video gaps (blank screen) occur before and after each video is played. To minimize the gap, avoid back to back video programming by scheduling an image between each video.

### *If both Ethernet & WiFi are connected, which one will take precedence?*

When Ethernet is not available or disconnected, system will try to use WiFi connection. If both connections are available, Ethernet will be used.

### *What is the maximum file size for a single video file?*

The maximum video file size for the XMP-3250/3350 is 2GB. We recommend reserving a safety margin to avoid exceeding the limit (i.e. limiting files to 1850MB).

### *What should I do if I forgot my password?*

In this case, please perform a factory reset.

Use the S/W RESET button located at the back of the media player to restore factory settings. This will also clear the player’s password.

### **Performing a factory reset**

Warning: This procedure will restore all menu settings to factory default and format the internal storage to factory conditions (all contents will be removed).

To restore factory settings and format the drive:

1. Disconnect power cable from the player unit
2. Press and hold the S/W RESET button
3. Connect the power cable while holding the S/W RESET button until *status light flashes* (about 15 seconds)
4. Please wait while the system drive is being formatted

### *How do I restore the device back to factory defaults?*

The S/W RESET button located at the back of the media player can be used to restore factory settings.

To restore factory settings:

1. Disconnect power cable from the player unit
2. Press and hold the S/W RESET button
3. Connect the power cable while holding the S/W RESET button until status light flashes (approx. 15 seconds)

### *How do I manage the playback of contents?*

The media appliance is designed to be interoperable with leading 3<sup>rd</sup> party management software solutions or via SMIL open standard commands.

### *Could the player display Flash or Microsoft PowerPoint presentations?*

The player features limited PowerPoint support, but not Flash support.

While PCs can play many formats with varying degrees of success, RISC-based media players are designed to reliably play specific video formats (Please see spec for details). While Microsoft PowerPoint native files could not play directly on a RISC-based player, the file is converted through other software (i.e. Adfotain Manager Express)

into an image format to be played as an image slideshow.

#### *How do I manage the playback of contents?*

The media appliance is designed to be interoperable with leading 3<sup>rd</sup> party management software solutions or via SMIL open standard commands.

#### *Why won't some media files play properly?*

The video data bit-rate used may have exceeded the recommended bit rate.

The video data bit-rate is the amount of video or audio data used per second to store or play the contents, usually expressed in Mbps (mega-bits per second). Video encoded with excessive bit-rates will not playback smoothly in the media player, likely due to storage i/o bottleneck.

Visit [www.digisignage.com](http://www.digisignage.com) for compatible media format presets.

#### *The media playback looks different on a PC compared to the media player's screen. (Wrong aspect ratio)*

There are 2 major aspect ratios (width-to-height ratios) for video content, but many kinds of displays. If you play 4:3 video on a 16:9 display (or vice versa), a circle becomes oval, and the picture takes on a squeezed or stretched look. To avoid this distorted look, adding black bars are a common technique.

The Network Media Player can be configured to automatically add black bars for certain types of displays. You can set the output resolution in XMP-3250's configuration menu to match the **native resolution** of your display.

#### *Some JPEG images cannot be played in the media player.*

Progressive JPEG are not supported. Please convert to baseline JPEG for maximum compatibility.

JPEG images can be either of 2 types: baseline or progressive compression. Baseline JPEG offers greatest compatibility, while progressive JPEGs are suitable for web site images. Progressive images are downloaded and displayed "progressively," being rendered more clearly as more data is received over the internet. Progressive images are primarily supported on PCs. For media appliances, make sure to save images as baseline JPEG in your photo editor, or resave them as baseline JPEGs using free tools such as IrfanView (<http://www.irfanview.com/>).

#### *Does the media player support video streaming?*

No. The media players play files from local storage and do not support real-time video streaming over the network. This delivers an optimum viewing experience free of playback quality issues such as stuttering, blocking, or blue-screens.

However, XMP series players support dynamic content delivery to push individual files quickly over the network using the SOAP API. This method is a compromise between live streaming with its high bandwidth demands and entire playlist content updates which necessitate longer update cycles.

#### *The media player is not playing. What should I do?*

Check the player's messages on the display (OSD, or on screen display) for status information.

Play list errors and scheduling issues are two major causes of playback problems. To determine if the problem is caused by a bad play list, just delete the play list and restart player. The player should loop through all media files, indicating a fault with the play list.

If the playback is scheduled to play at specific time, check to see if the device is set to the right time zone on the world clock. When nothing seems wrong, the time zone setting is often the reason the program is not played.